Linksys 3102 - VoIP Config Setup Guide

Connecting



Please ensure your ADSL/Broadband connection is already active before you begin.

- Connect an Ethernet cable from your modem/router to the **Internet** port on the **Linksys 3102** VoIP Router.
- Connect an Ethernet cable from your computer to the Ethernet port on the Linksys 3102 VoIP Router.
- Connect the telephone cable from the line port to your ADSL filter/splitter.
- Connect a regular telephone handset to the phone port.
- Connect the power adapter to your Linksys 3102 VoIP Adapter and turn it on.
- Allow 1-2 minutes for the device to fully power up.

Accessing the Linksys 3102 VoIP router

- Follow these simple steps to configure you **Linksys 3102** VoIP Adapter to connect to the gotalk VoIP service.
- In the address bar type: http://192.168.1.1 to connect to the Linksys 3102 VoIP Router.





- Log into the Linksys 3102 VoIP Router with the username of "user"
- Password is Blank





The following screen will appear



Copyright @ 1992-2006 Cisco Systems, Inc. All Rights Reserved.

Ensure the Router Is set to DHCP by clicking on WAN





NOTE: you must change to the Admin login to open up the settings for both the "Router" and the "Voice" menus; you will need to do this each time you swap from "Router" to "Voice"

- Click "Admin Login" to change to the "administrator login"
- "Admin Login" is located down left hand bottom of each page, and the Top right hand side of each page



Enlarged View

Setting up VoIP


• Click on the "Voice" heading on the top left hand side



The next step is to change to the Admin menu for the Voice Section by clicking on "Admin Login"



 Next click on the "advanced" heading, Both of these steps open up more menu settings in the Voice Section

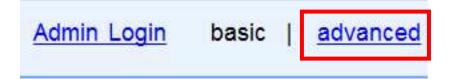



• The following menus will appear

Router			Voice						
Info	System	SIP	Regional	Line 1	PSTN Line	User 1	PSTN User		<u>User Login</u> basic <u>advar</u>
Produc	ct Informa	ition							
Product Name:			5	SPA-3102	2		Serial Number:		FM600H219570
Software Version:			3.3.6(GW)				Hardware Version	1:	1.4.5(a)
MAC Address:			0	00E08C	E1107		Client Certificate:		Installed
Customization:			C	Open					
Systen	n Status								
Current Time:			1/1/2003 13:17:14			Elapsed Time:		01:17:14	
RTP Packets Sent:			0				RTP Bytes Sent:		0
RTP Packets Recv:			Ö				RTP Bytes Recv:		0
SIP Messages Sent:			0				SIP Bytes Sent:		0
SIP Messages Recv:			0			SIP Bytes Recv:		0	
Externa	al IP:								
Line 1	Status								
Hook State:			C)n			Registration State	ė:	Not Registered
Last Registration At:							Next Registration		
Message Waiting:			N	lo			Call Back Active:		No
	alled Numb						Last Caller Numb	er:	
AND ADDRESS OF THE PARTY OF THE	d SIP Port:								
Call 1 State:				Idle			Call 2 State:		Idle
Call 1 Tone:			N	None			Call 2 Tone:		None
Call 1 Encoder:							Call 2 Encoder:		
	Decoder:						Call 2 Decoder:		
Call 1 F							Call 2 FAX:		
Call 1 7	The second second						Call 2 Type:		
Call 1 F	Remote Ho	ld:					Call 2 Remote Ho	old:	



Click on Line1

Line Enable: Yes

Sip proxy Port 5060

• Proxy: sip.gotalk.com

Register: yes

Register Expires: 240

Display Name: Username

Password: must be in CAPS

• Auth ID: Username


User ID: Username

• Use Auth ID: Yes





• The second account can be set up from the "**PSTN line"** heading, follow the same settings for the first account but change the "**SIP port"** to **5061**

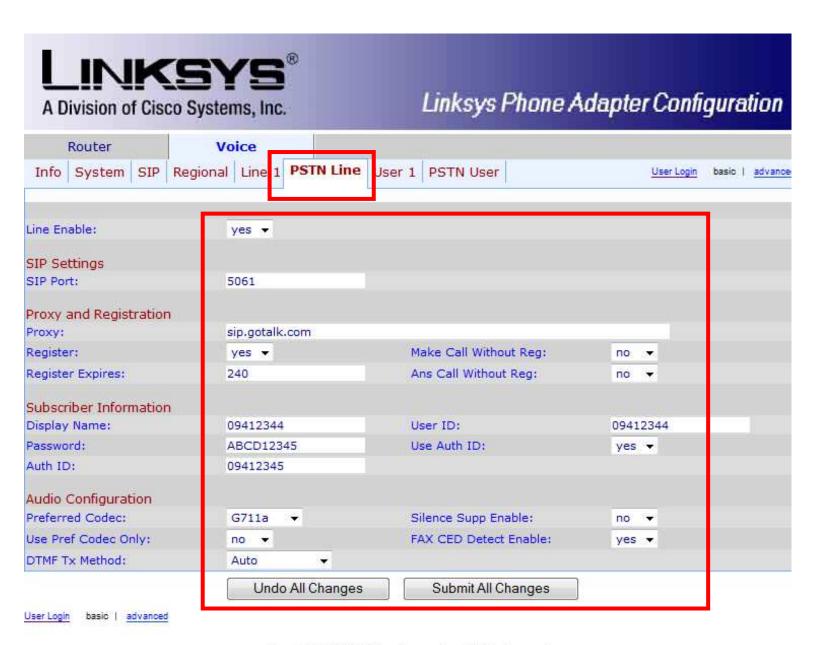

Copyright @ 1992-2006 Cisco Systems, Inc. All Rights Reserved.



Codecs

- Each account can use its own codec settings, these settings are located at the bottom of the page on both the "Line 1" and "PSTN line" page
- Click the Drop down box "Preferred Codec" to change the codec used, 729A for slower connections and 711alaw for faster connections
- This page also contains the "DTMF method" which is set to "Auto"



- By default the Linksys 3102 VoIP router does not have a password, to set up a password browse to the "Voice" tab and then selected "System"
- You can now type a password into the "user password" field





 Once you have applied these settings, click on the "Submit All Changes" button (located at the bottom of each page) and the router will save all the changes and reboot, you will then be able to make VoIP calls"



Note: you can click the "**Submit All Changes**" button from any screen and it will save and reboot your setting changes.

